

Datasheet for #sb276 DNRecommendations:

Please read the starter kit user manual (at least installation chapter 5), if available, and have a look at the FAQ at <http://www.alpeslasers.ch/alfaq.pdf>

WARNING: Operating the laser with longer pulses, shorter period, or higher voltage or current than specified in this document may cause damage and will result in loss of warranty, unless agreed upon with Alpes Lasers!

WARNING: Beware of the polarity of the laser. This laser has to be powered with negative bias on the laser contact (= bonding pad, corresponding to the label "laser" on the LLH) and the positive bias on the base contact (= submount, corresponding to the label "base" on the LLH).

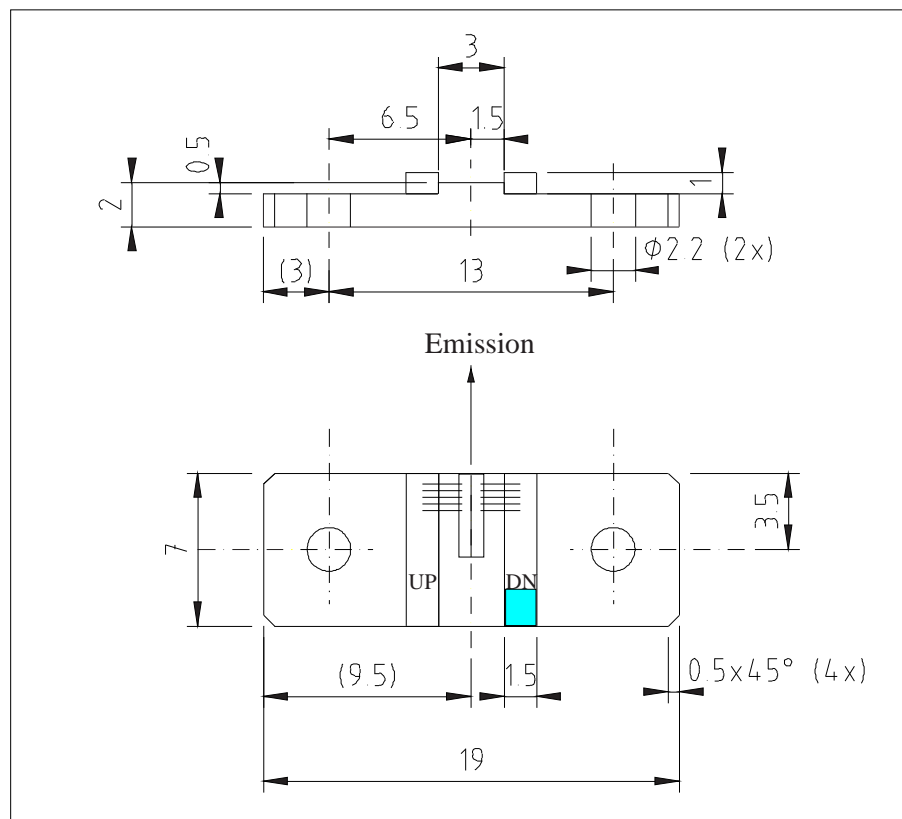


Figure 1: Support mounting for #sb276 DN (please note that the laser is connected to the DN pad drawn in blue)

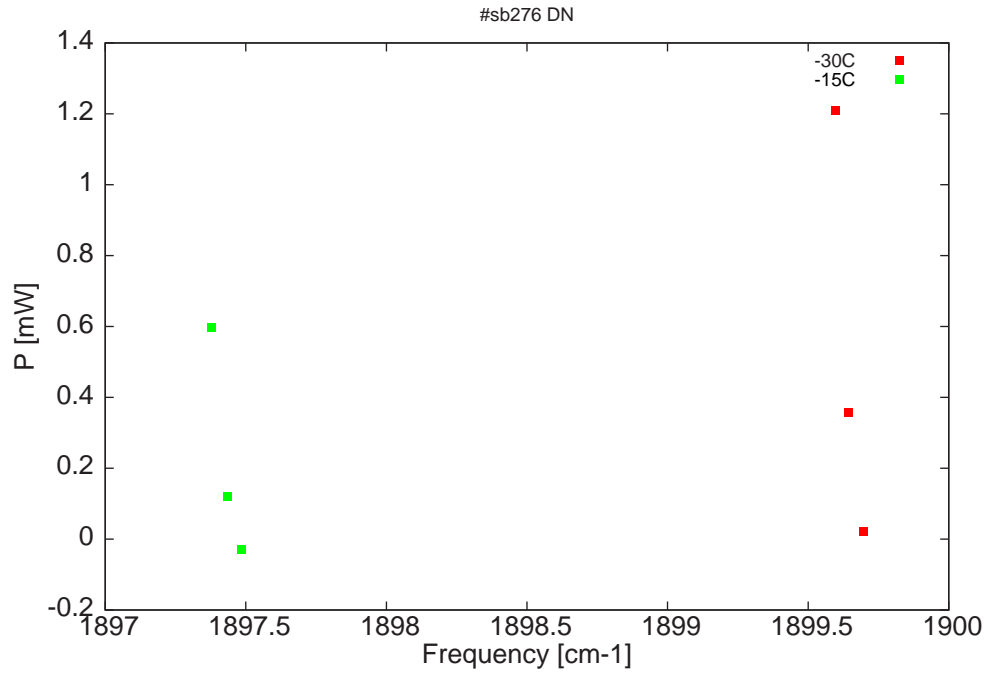


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

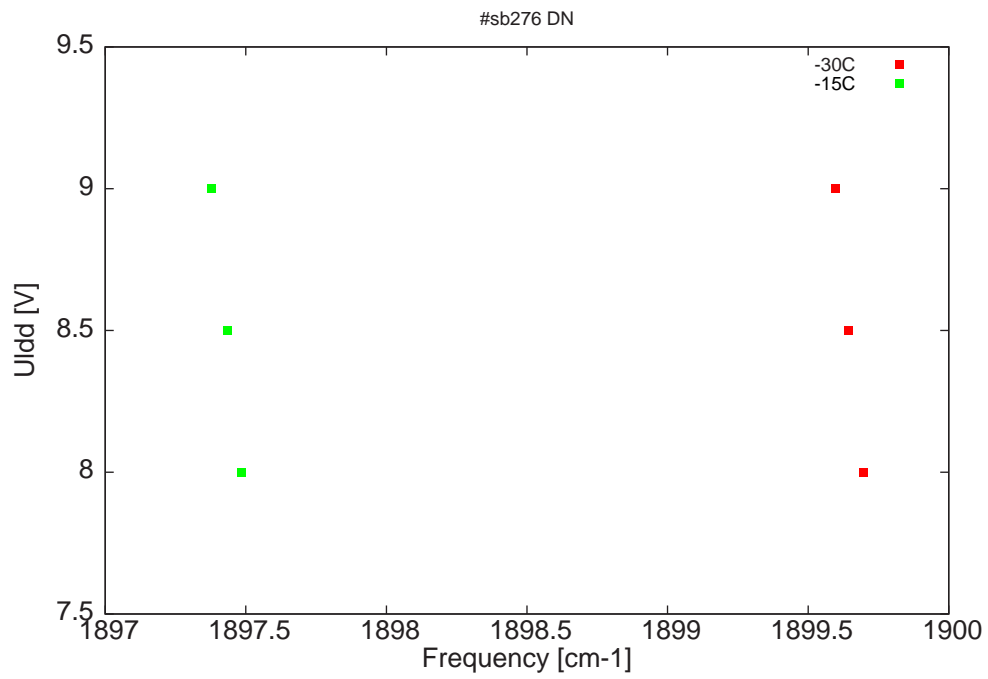


Figure 3: DC voltage fed to LDD (Uldd) as a function of the singlemode emission frequencies and temperatures

λ [nm]	ν [cm ⁻¹]	P[mW]	Temp[°C]	U_{LDD} [V]	I_{pulse} [A]
5264	1899.7	0	-30	8	0.48
5264.1	1899.6	0.4	-30	8.5	0.59
5264.3	1899.6	1.2	-30	9	0.7
5270.1	1897.5	0	-15	8	0.51
5270.3	1897.4	0.1	-15	8.5	0.62
5270.4	1897.4	0.6	-15	9	0.73

Table 1 : singlemode optical output power as function of operating parameters

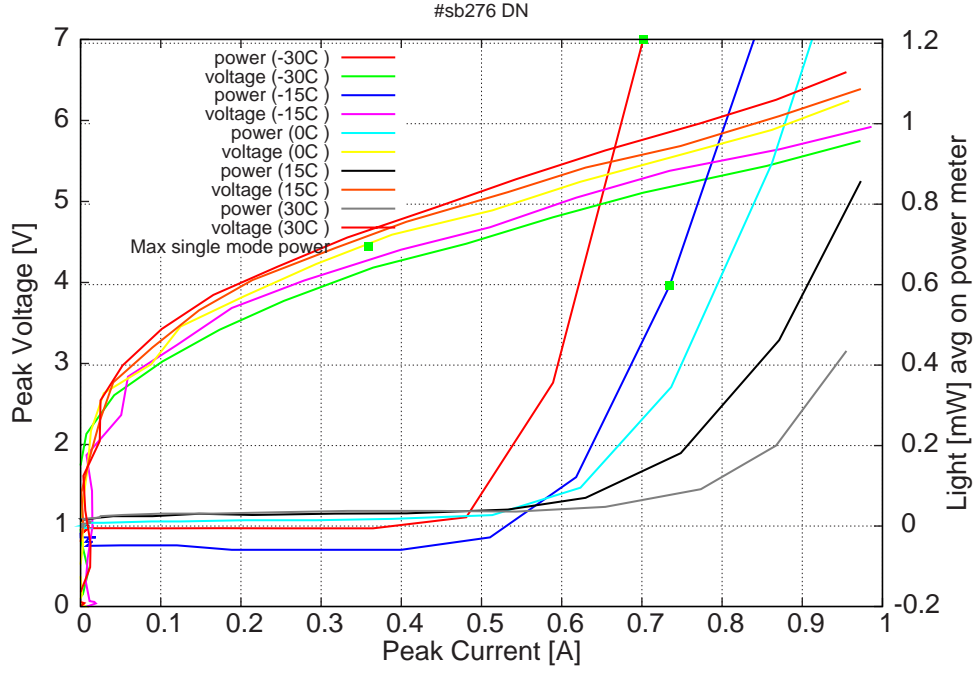


Figure 4: peak voltage and average power vs peak current at 2%dc (the solid squares indicate the maximum singlemode emitted power)

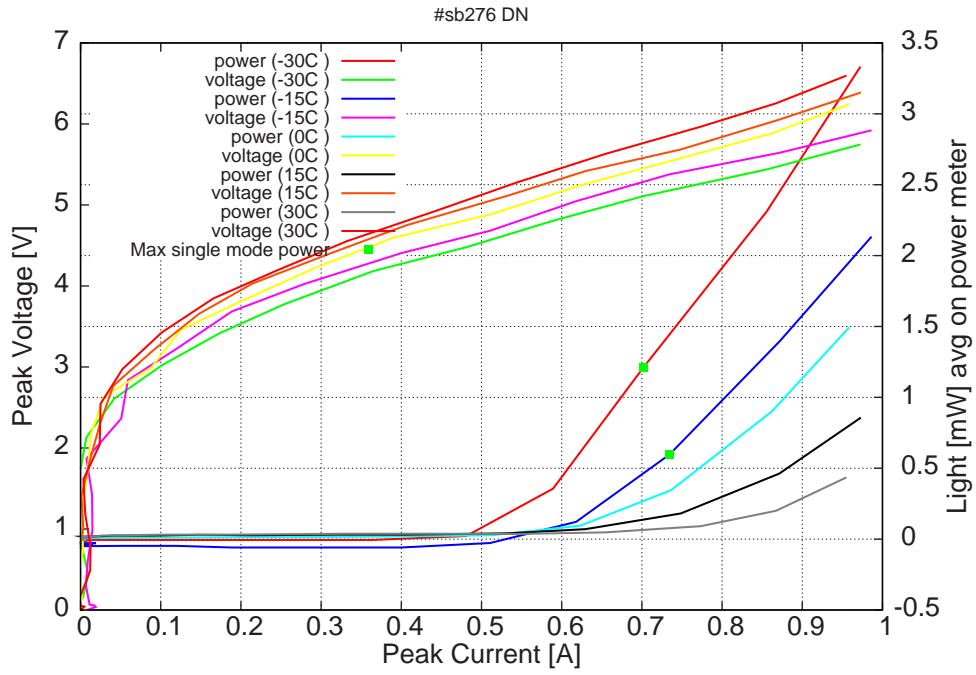


Figure 5: peak voltage and average power vs peak current at 2%dc (including the multi-mode region)

Note: data taken with 50ns pulses, 2.5 μ s period.

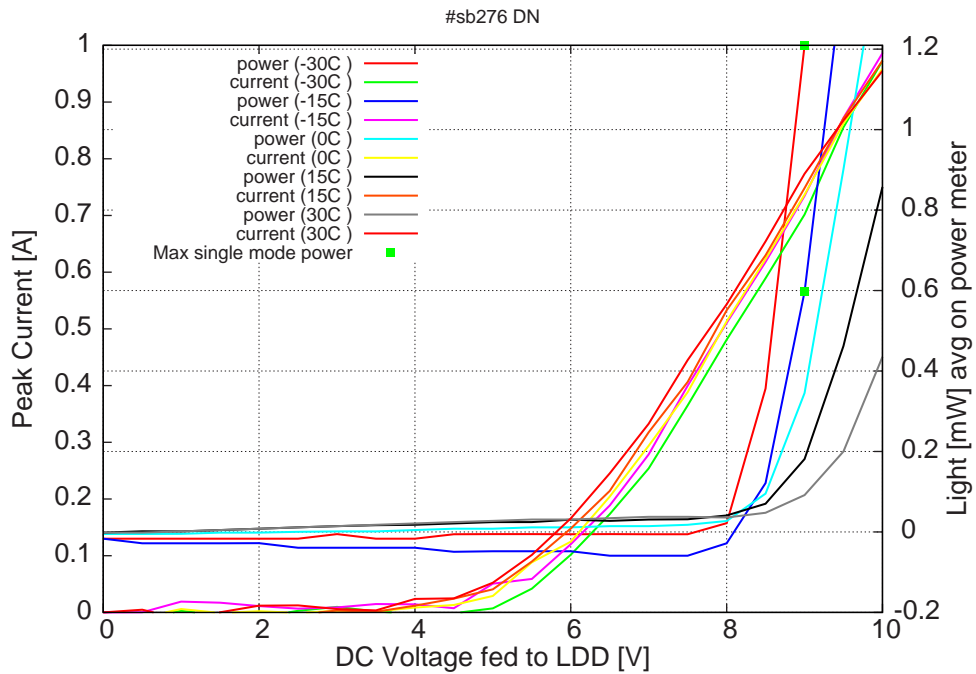


Figure 6: peak current and average power vs LDD voltage at 2%dc (the solid squares indicate the maximum singlemode emitted power)

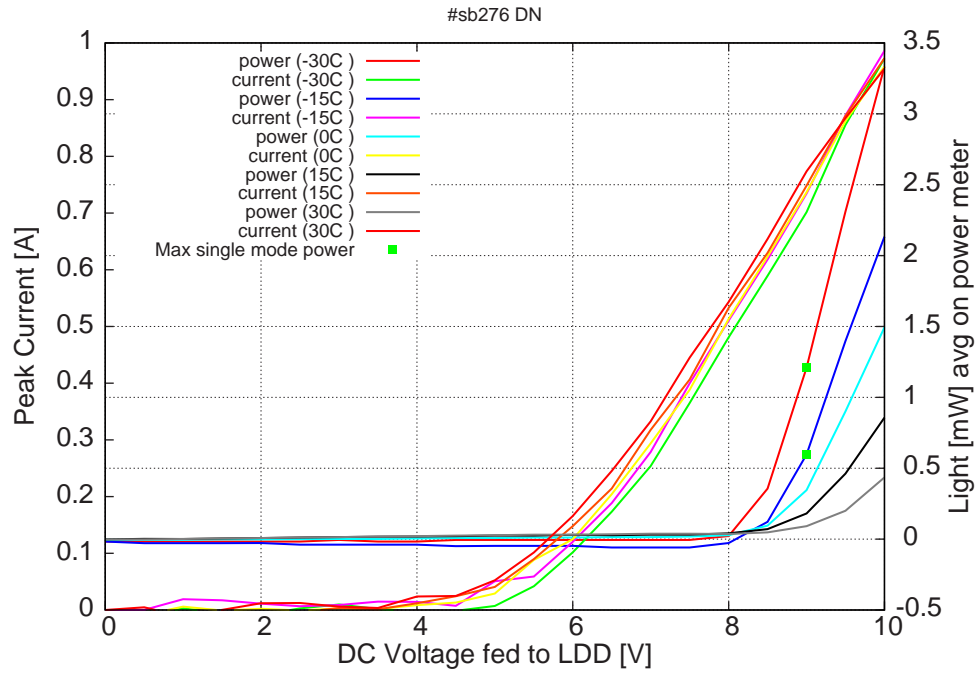


Figure 7: peak current and average power vs LDD voltage at 2%dc (including the multi-mode region)

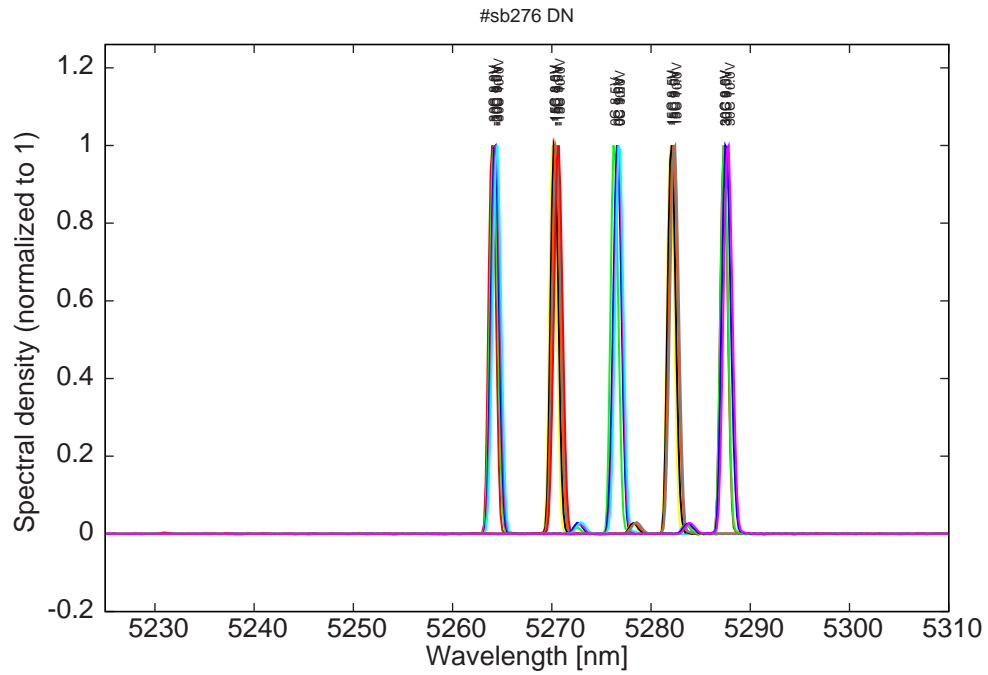


Figure 8: spectra at -30C, -15C, 0C, 15C and 30C at 2%dc for various LDD voltages

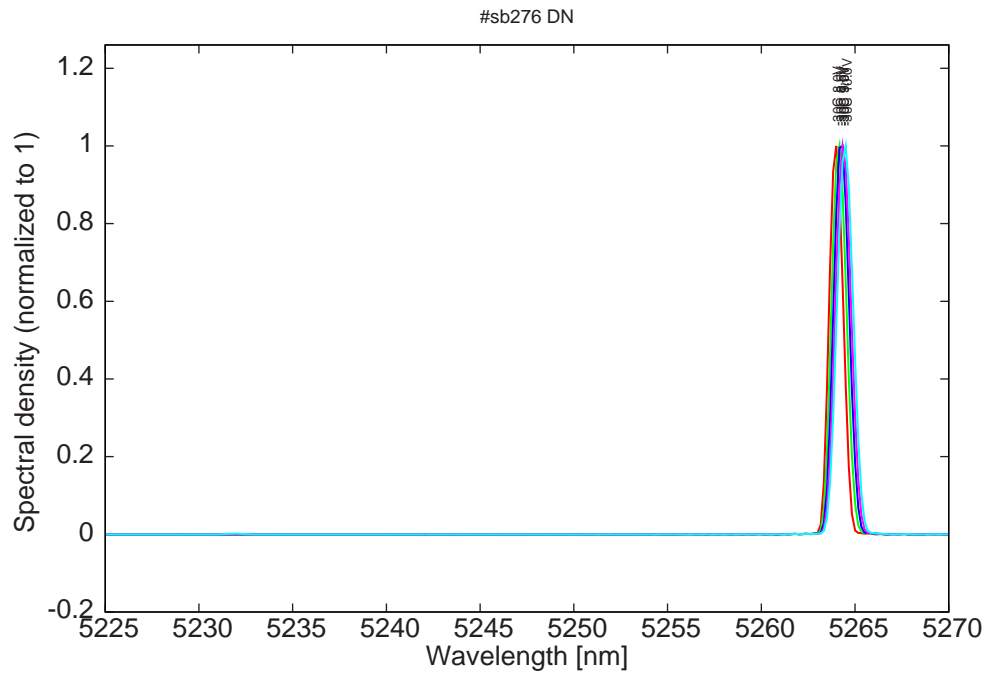


Figure 9: spectra at -30C for various LDD voltages (modes around 5232 nm)

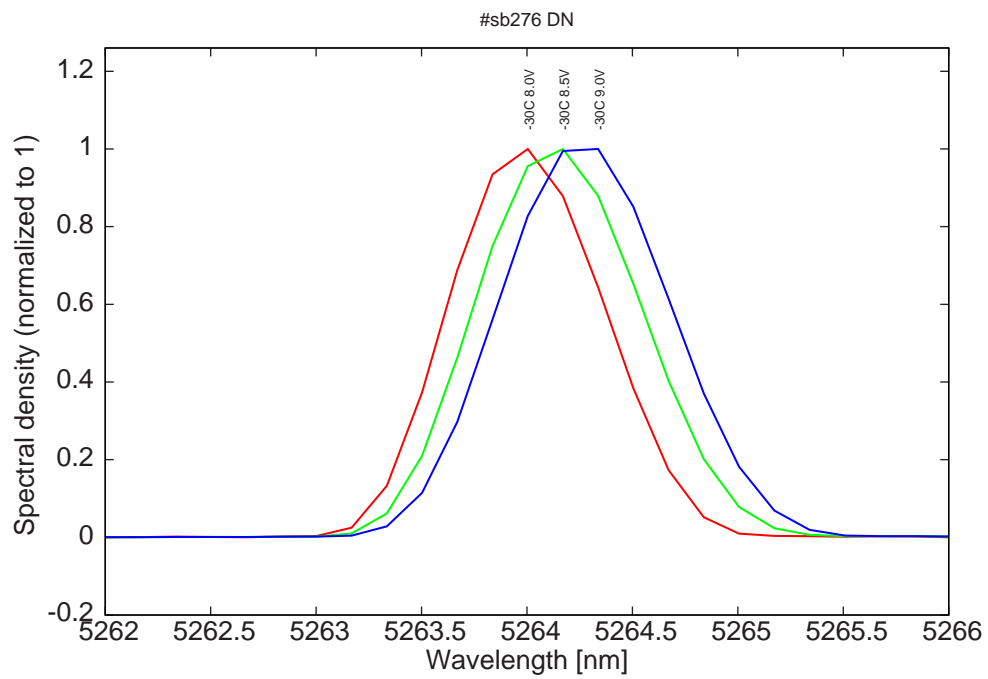


Figure 10: spectra at -30C for various LDD voltages (monomode range)

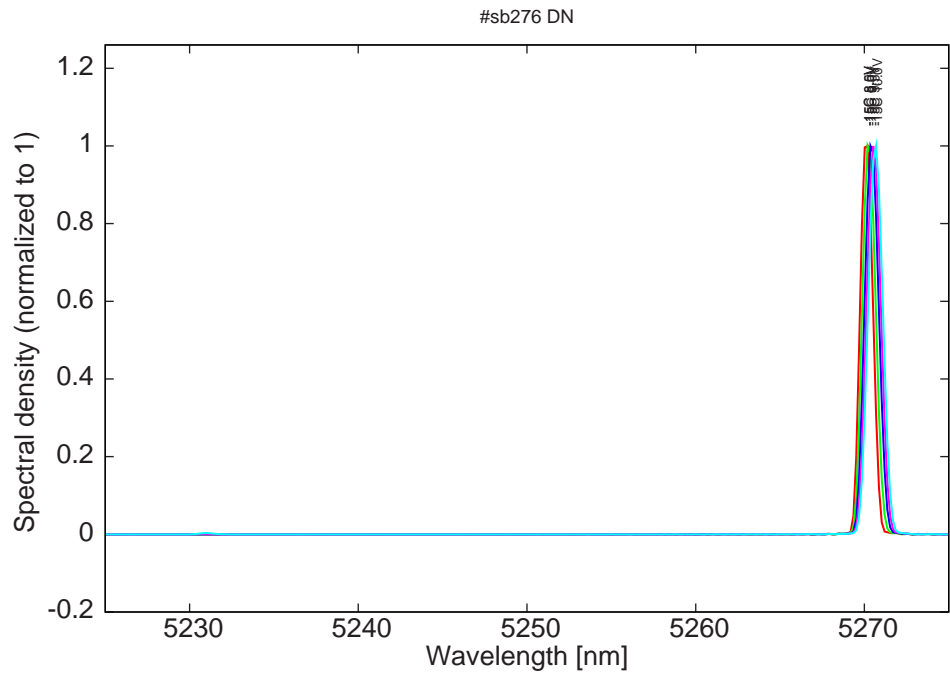


Figure 11: spectra at -15C for various LDD voltages (modes around 5231 nm)

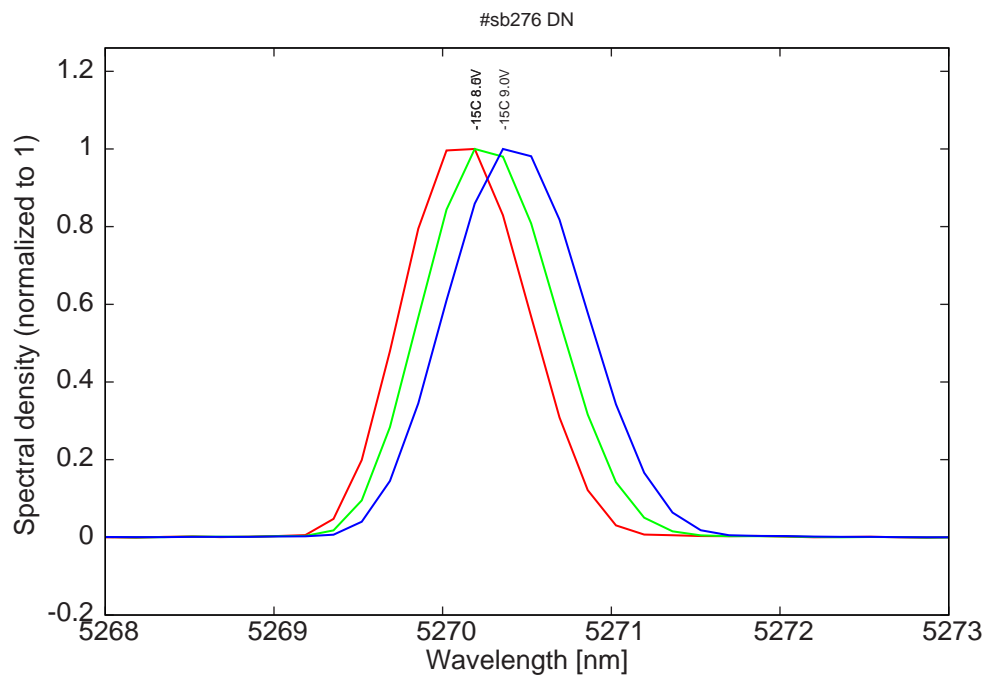


Figure 12: spectra at -15C for various LDD voltages (monomode range)

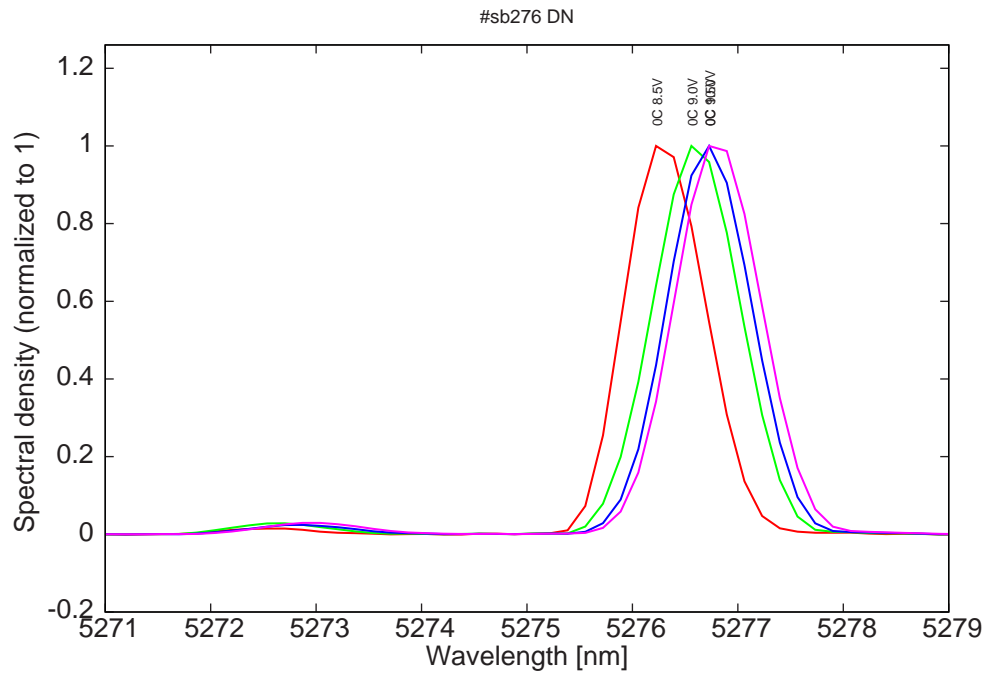


Figure 13: spectra at 0C for various LDD voltages (all bimodes)

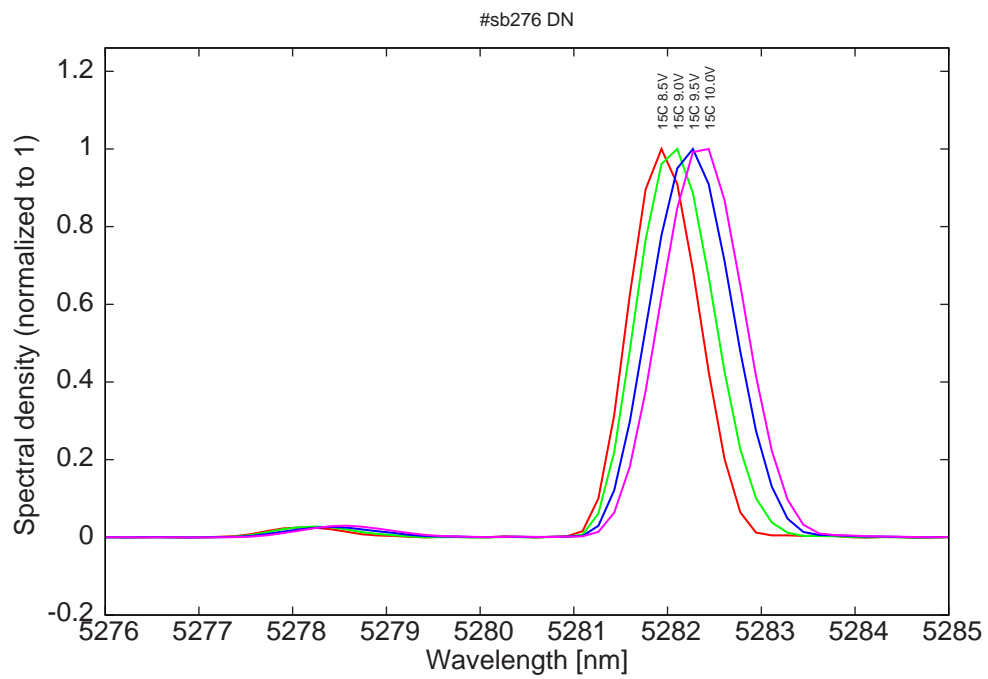


Figure 14: spectra at 15C for various LDD voltages (all biomodes)

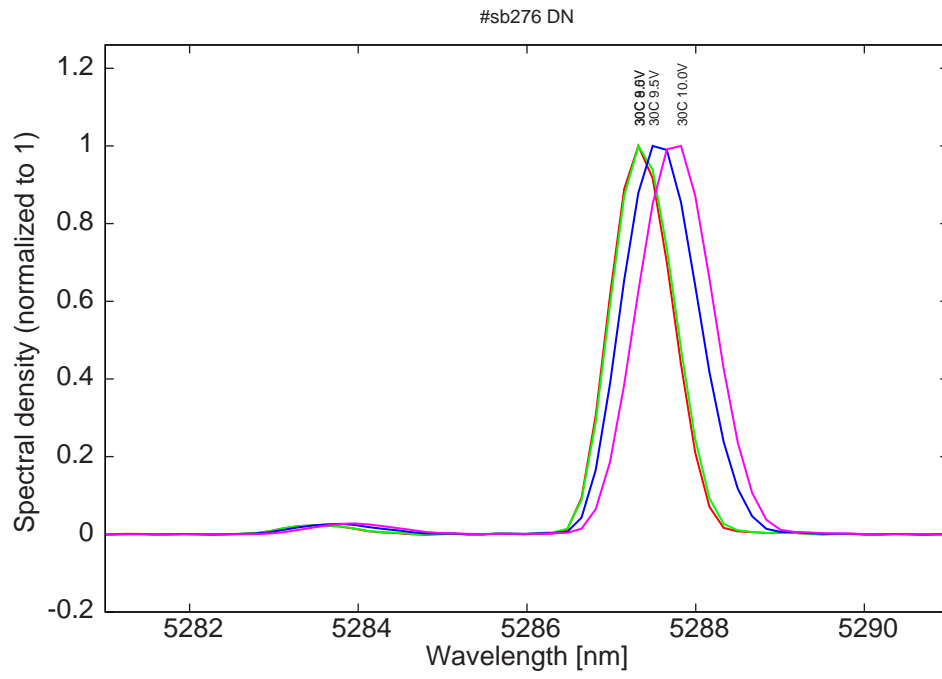


Figure 15: spectra at 30C for various LDD voltages (all bimodes)